RIVETER HEAD
Model: ARV-025M
Explode View

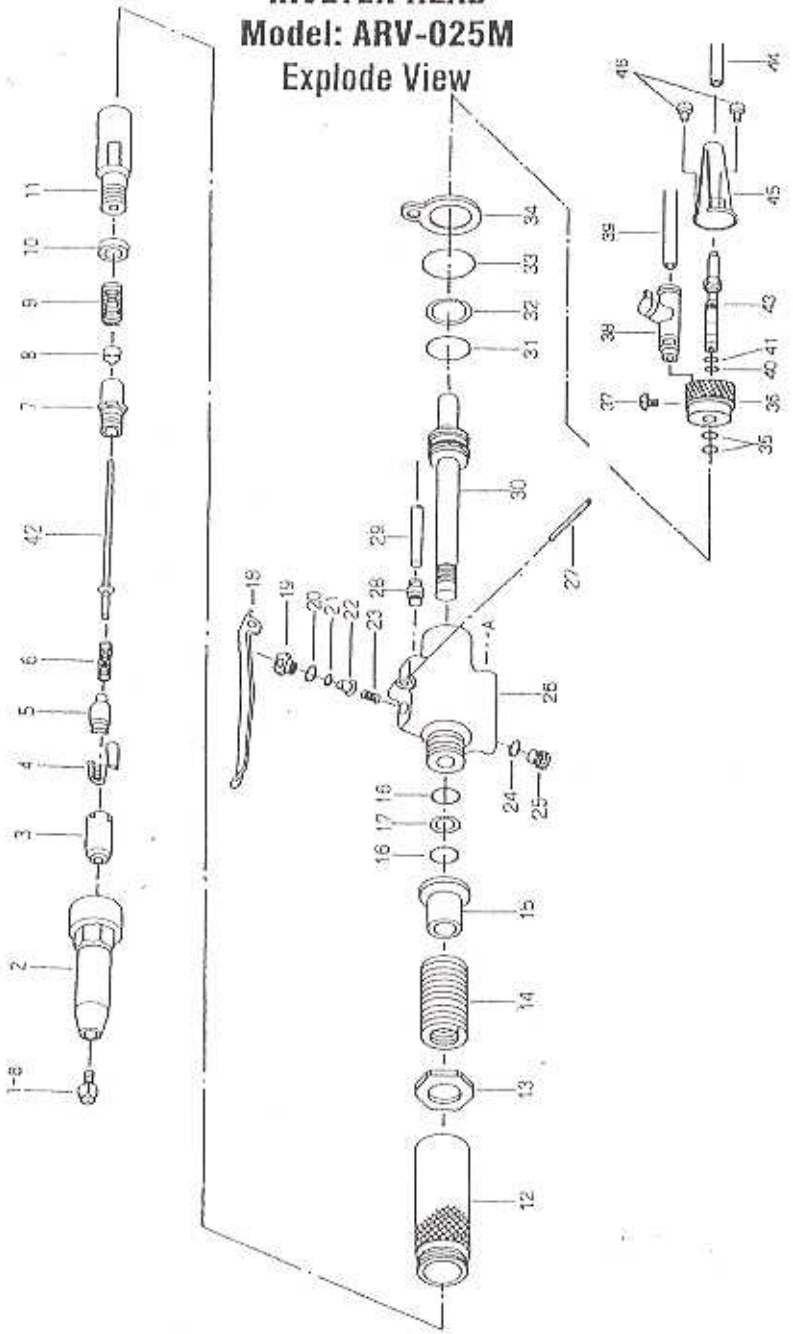

ARV-025M RIVETER HEAD ... PARTS LIST

Index No.	Description	Parts Code	Index No.	Description	Parts Code
1-B	Nosepiece 1/8" (3.2mm)	10028	25	Bleed Plug	12135
2	Frame Head 'M'	10105	*26	*Frame Unit	23733
3	Jaw case Head	10280	27	Spring Pin (3x18 mm)	10145
4	Ultra Jaws 'M'	10261	28	Straight Joint	14848
5	Jaw Pusher	10132	29	Air Tube (ϕ4mmx2.6 meter)	23672
6	Jaw Pusher Spring	10133	30	Oil Piston	23731
7	Jaw Case	10279	31	Urethene O-Ring (P-22)	25443
8	Collar	10286	32	B-Ring (P-22)	10181
9	Collar Spring	10287	33	O-Ring (S-28)	10221
10	Jaw Case Spacer 'B'	23750	34	Hanger Clip	10106
11	Jaw Case Spacer 'A'	23752	35	O-Ring (P-10)	10274
12	Hand Grip	23744	36	Frame Cap	24364
13	Jaw Case Lock Nut	23748	37	Pan Head Screw (M3x5)	10357
14	Returning Spring	23747	38	Air Cock	24365
15	Returning Spring Stopper	23745	39	Air Tube (ϕ 6mmx8 1/2)	22033
16	O-Ring (P-12)	10128	40	O-Ring (S-5)	10276
17	B-Ring (P-12)	10129	41	O-Ring (S-6)	10220
18	Trigger Lever	23742	42	Guide Pipe 'A" (Yellow)	24366
19	Trigger Stopper	23741	43	Nozzle Unit	14324
20	O-Ring (S-10)	10151	44	Shoot Hose (1.8 meter)	10301
21	O-Ring (P-4)	10454	45	Safety Cover	25463
22	Switch	23740	46	Pan Head Screw (M3x8)	20860
23	Switch Spring	22031		*No. 26 Frame Unit includes: No.16 (2 pcs) & No.17 (1 pc)	
24	O-Ring (P-5)	12120			

PRESSURE RELEASE VALVE
25467